




INSTALLATION INSTRUCTION FOR POWERING SUBSCRIBER PREMISE AMPLIFIERS

8321 PINES BLVD, BAY G-40
PO BOX 245398
PEMBROKE PINES, FL 33024
U.S.A
+1(954)422.2343 TELE
+1(954)431.9437 FAX
INFO@HOMENETDEPOT.COM
www.HomeNetDepot.com

SELF POWERING

1. Select a location where the premise RF amplifier can receive the maximum signal levels from your cable TV provider or antenna systems. Mount the device in safe location with the two #6 stainless steel wood screws. Insure that the wood screws penetrate the mounting surface a minimum of 1/4" (7mm).
2. Obtain #12 or 14 copper grounding wire from your local home improvement store. Remove the insulation up to 1/2" (23mm) of the end of grounding wire and insert it into the ground hole in the top right corner of the amplifier's housing, tighten the grounding screw. Mount the grounding wire securely to the dwelling with mounting clips. Prepare the ground wire as before by removing the insulation and securely tighning the wire to the existng grounding block or a tested earth ground.
3. Prepare and connect the coaxial cable from the cable TV company or your antenna system to the Premise RF amplifier's RF INPUT connector.
4. Connect the coaxial cable coming from within the dwelling to the amplifier's output connector. This coaxial cable should terminate in a settop converter box or the antenna RF input to the television receiver or other RF equipment.
5. Prepare and install "F" connectors to an jumper of coaxial cable long enough to be installed from an 120vac wall outlet to the mounting position of the premise RF amplifier. Connect the coaxial jumper to the AC/DC powering wall adapter and the other in to the PWR IN connector in the amplifiers top left corner. PLEASE NOTE: The jumper should not exceed 50 feet (15 meters) in overal lenght from the wall powering adapter to the amplifier OR the amplifier's performance will be compromised.
6. Plug in the AC/DC powering wall adapter. If the installation is correct the amplifier's DCn powering LED will be visible and illuminated.


SELF POWERING DIAGRAM

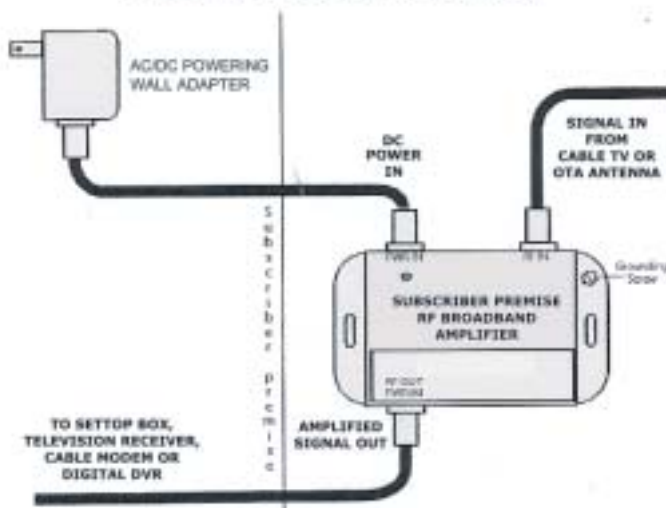

REMOTE POWERING UTILIZING A POWER INSERTER

1. Select a location where the subscriber premise RF amplifier can receive the maximum signal level from your cable TV provider or antenna systems. Mount the device in safe location with the two #6 stainless steel wood screws. Insure that the wood screws penetrate the mounting surface a minimum of 1/4" (7mm).
2. Obtain #12 or 14 copper grounding wire from your local home improvement store. Remove the insulation up to 1/2" (23mm) off the end of grounding wire and insert it into the ground hole in the top right corner of the amplifier's housing, tighten the grounding screw. Mount the grounding wire securely to the dwelling with mounting clips. Prepare the ground wire as before by removing the insulation and securely tighning the wire to the existng grounding block or a tested earth ground.
3. Prepare and connect the coaxial cable from the cable TV company or your antenna system to the premise RF amplifier's RF INPUT connector.
4. Remove the coaxial power inserting device from the packaging and determine a mounting location. This location should be within the path that the coaxial cable will follow when it connects to the closest video device. Note; Do not mount the power inserting device until all connectors are prepared and securely tightened (See Item 7 below).
5. Connect the coaxial cable coming from within the dwelling to the amplifier's output connector. This coaxial cable should terminate in a settop converter box or the antenna RF input to the television receiver or other RF equipment.
6. Cut the coaxial cable installed above (item 4) at the point where the power inserting device installed and mounted. Prepare and apply coaxial "F" connectors to both ends of the cut cable. Install the RF IN and RF OUT to the device.
7. Prepare and install "F" connectors to an jumper of coaxial cable long enough to be installed from an 120vac wall outlet to the mounting position of the premise power inserting device. Connect this coaxial jumper to the AC/DC powering wall adapter and the power inserting device. PLEASE NOTE: The coaxial cable should not exceed 50 feet (15 meters) in overalli lenght from the AC/DC power wall adapter to the amplifier OR the amplifier's performance will be compromised.
8. Plug in the AC/DC powering wall adapter. If the installation is correct the amplifier's DC powering LED will be visible and illuminated.

REMOTE POWERING DIAGRAM

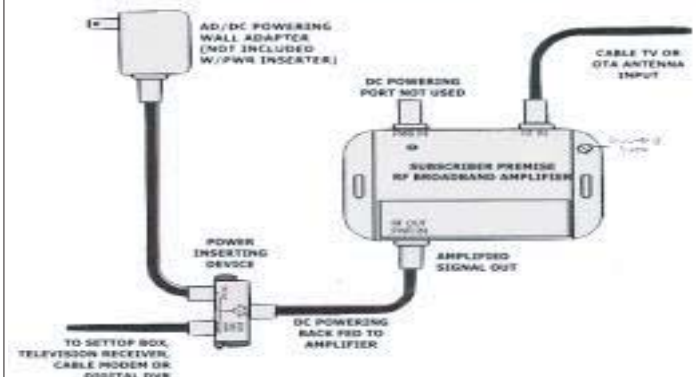

INFORMATION PROVIDED IS FOR INFORMATIONAL PURPOSES ONLY
NO LIABILITY OR RESPONSIBILITY IS ACCEPTED FOR IT'S USE